

1. Power down eIDC
2. Connect jumper between the buzzer and IN2
3. Connect power to eIDC
4. Wait 15 seconds
5. Remove jumper (leave power connected)
6. Wait 30 – 45 seconds
7. eIDC should flash IP address

